

Equipment Controls

Audio Mode Button

Button used to control Audio Receiver functions

TV Mode Button

Button used to control TV Functions.

RCU Setup

Button used to program remote for different devices.

DVD Mode Button

Press to control DVD functions

Auxillary Mode Button

Press to control Aux Device Functions.

Set Top Box Mode Button

Press to control Set Top Box Functions.

Master Power Button

Press to turn off device that your remote is currently in control of.

DVR Controls

Jump Back Button

Press to jump back 60 seconds

Play/Pause

Press to play current video.

Rewind Button

Press to rewind video in 2x, 4x, 10x, 25x, 50x, 100x, 300x speed

Stop Button

In recorded video, stops playback.

Jump Ahead Button

Press to jump ahead 30 seconds

Fast Forward Button

Press to fast forward video in 2x, 4x, 10x, 25x, 50x, 100x, 300x speed

Record Button

Press to record in live TV or the Guide.

Navigation Controls

Menu Button

Press to bring up the Menu Bar.

Arrow Buttons

Press to move around a menu.

Guide Button

Press to cycle through the on screen guide and favorites lists.

Volume

Press to Increase/Decrease Volume.

Mute Button

Press to turn off audio.

Input Button

Press to change the input on the TV. (Press TV Mode Button First)

Info Button

Press to bring up information on the current program. (Twice for more information)

OK Button

Press to confirm a command.

Exit Button

Press to exit to live TV.

Page Up/Down Button

Press to scroll a full page in the Guide.

Custom Buttons

Functions vary. Can be programmed.

Channel Button

Press to change channels & scroll a full page in the Guide.

Last Button

Press to change to previously tuned channel.

Closed Caption Button

Press to enable/disable.

Turning Television ON/OFF

1. Press **TV** to set remote to control your television.
2. Press **POWER** to turn ON/OFF your television.

Changing Cable Channels

1. Press **STB** to set remote to change cable channels.



STAR TV



- Place the **ADB** remote and the **ORIGINAL** remote head-to-head about 2 inches apart.
- Press and **HOLD** the **SAME** button (power) on the **ORIGINAL** remote. The ADB remote TV button will blink rapidly and turn off. Keep holding the button on the **ORIGINAL** remote until the **TV** button on the ADB remote blinks twice.

**If the learning failed, the TV button will emit on long blink. You will have to repeat step 6.*